

# WATCHPOD

## Installation Guide

---



TOOLS REQUIRED: Cordless Drill and 1/4" Allen Key




# WATCHPOD

## Installation Guide

\* To prevent possible scratches or damage, ensure product is unloaded carefully.

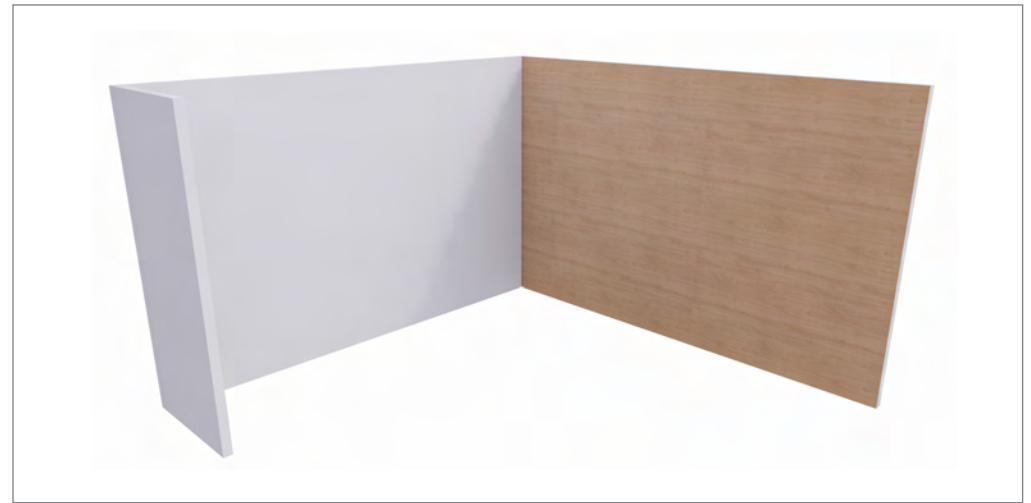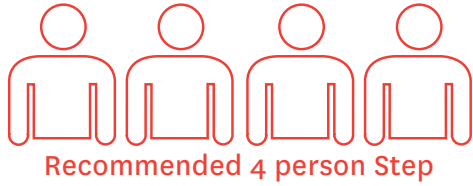


# 1.

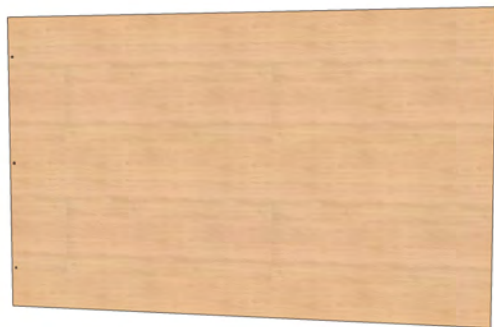

Place first spine panel, and ensure it is level. Use levelers to adjust if needed.

# 2.



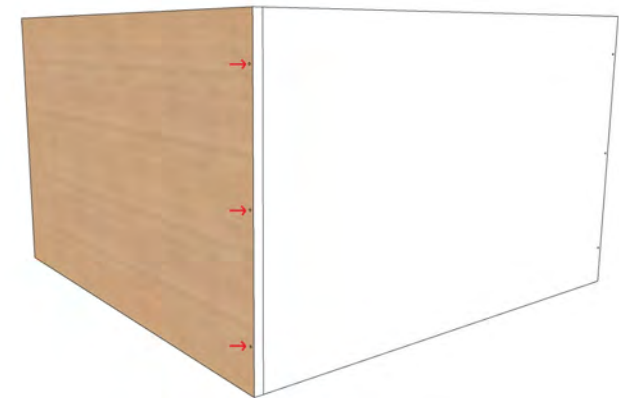


Line up spine and side panels with holes to create 90 degree corner, and start all 3 bolts by hand until threads are engaged. Once engaged, tighten with cordless. Once complete, fasten the bolts tight and ensure both panels are level. Use levelers to adjust.


# WATCHPOD

## Installation Guide

\* To prevent possible scratches or damage, ensure product is unloaded carefully.

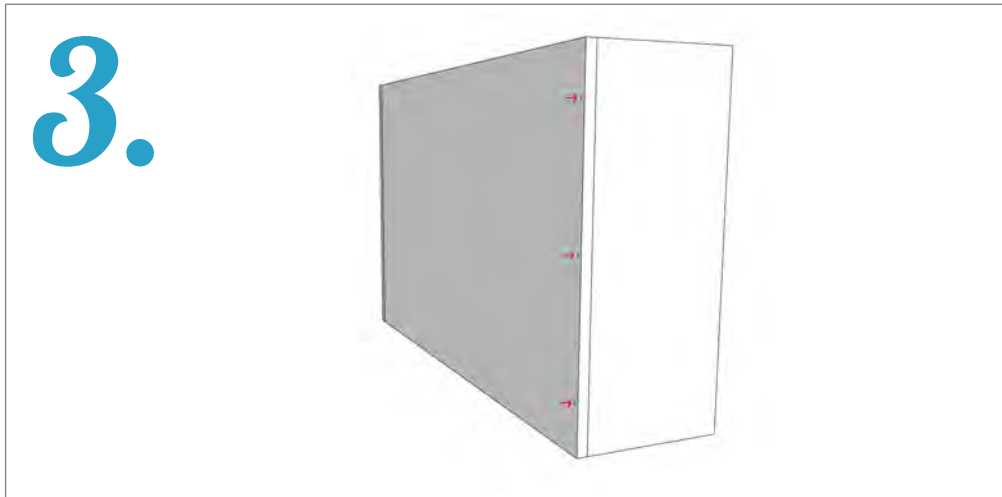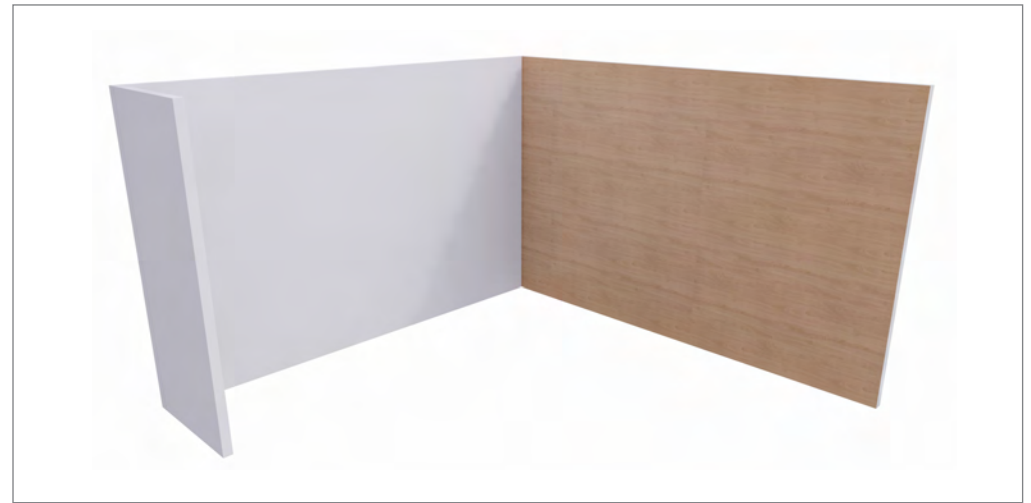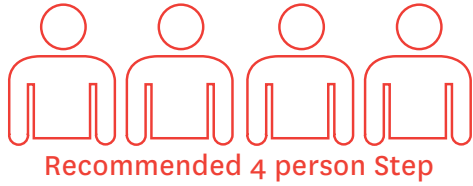

Line up 24" return panel with holes at end of side panel and start all 3 bolts by hand until threads are engaged. Once engaged, tighten with cordless. Once complete, fasten the bolts tight and ensure both panels are level. Use levelers to adjust.

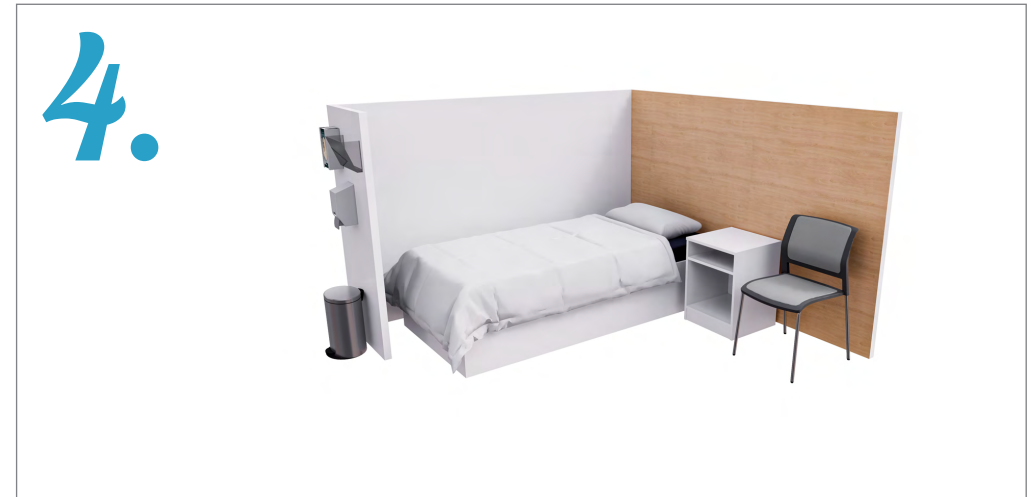

Ensure cover caps are used to cover bolt holes. Then place bed and cabinet in panel system. Install is now complete!



**HEAD OFFICE:** Level 1, 1 Queens Road, Melbourne VIC 3004

**MELBOURNE:** 62 Barrie Rd, Tullamarine VIC 3043

**SYDNEY:** 1 Bearing Rd, Seven Hills NSW 2147

**BRISBANE:** 4/7 Lathe St, Virginia QLD 4014

**ADELAIDE:** 60 Wing St, Wingfield SA 5013

**PERTH:** 14 Somersby Rd, Welshpool WA 6106